







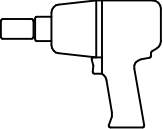


HARDWARE INCLUDED:

-  (4) 7/16" x 2" Bolts
-  (3) 7/16" x 3" Bolts
-  (14) 7/16" Washers
-  (7) 7/16" Lock Nuts
-  (10) Lug Nuts
-  (2) Axle Mounting Brackets

TOOLS REQUIRED:

-  (1) 5/8" Wrench
-  (1) 11/16" Wrench
-  (1) 13/16" Impact Wrench

ASSEMBLY INSTRUCTIONS:

- ➊ Lift generator and trailer deck with OSHA approved lifting device.
- ➋ Bolt tires to axle using (10) lug nuts. Tighten to 90 ft-lbs.
- ➌ Bolt tongue to trailer deck using (3) 7/16" x 3" bolts, (6) 7/16" washers & (3) 7/16" lock nuts. Make sure that the skid-shoe at the front of the tongue is on the bottom.
- ➍ Roll the axle & wheels under the trailer deck.
- ➎ Lower generator and trailer deck down onto axle, center the trailer on the axle.
- ➏ Using (2) axle mounting brackets, (4) 7/16" x 2" bolts, (8) 7/16" washers & (4) 7/16" lock nuts secure the axle to the trailer.

